

Access control:
Package CP2

Single entrance & single exit car park access control system


Application note

Description

Entry reader is linked to exit reader for anti-passback function. Support up to 1024 cards. During entry or exit, flash the proximity card in front of the reader (installed inside the gooseneck). Upon identity verification, the reader will trigger the barrier gate to open. Multiple CP2 can be linked together.

Since there are no PC software to record the user profile, management are suggested to keep a hardcopy records of all the users and their assigned card number for future maintenance. Can add AR801CM to connects to PC.

Installation diagram

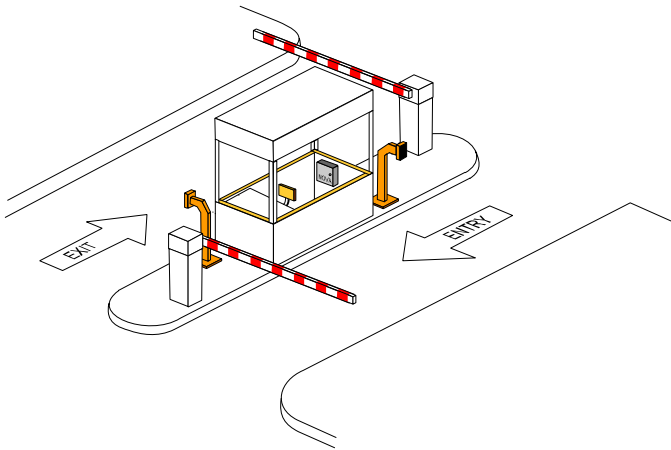


Ordering information

Ordering code: CP2

Qty	Parts
1 pcs	Soyal AR721HV3 keypad reader - (for entry reader)
1 pcs	Soyal AR721K keypad reader (for anti pass back function at exit reader)
2 pcs	Gooseneck (w/ epoxy painting)
1 pcs	NOVA150 power supply with backup battery DC12V 7Ah
2 pcs	SP3 lightning protector
10 pcs	Soyal AR2561RL 1.8 mm card

** Guaranteed maximum compatibility with MAGBR424 barrier gate system.

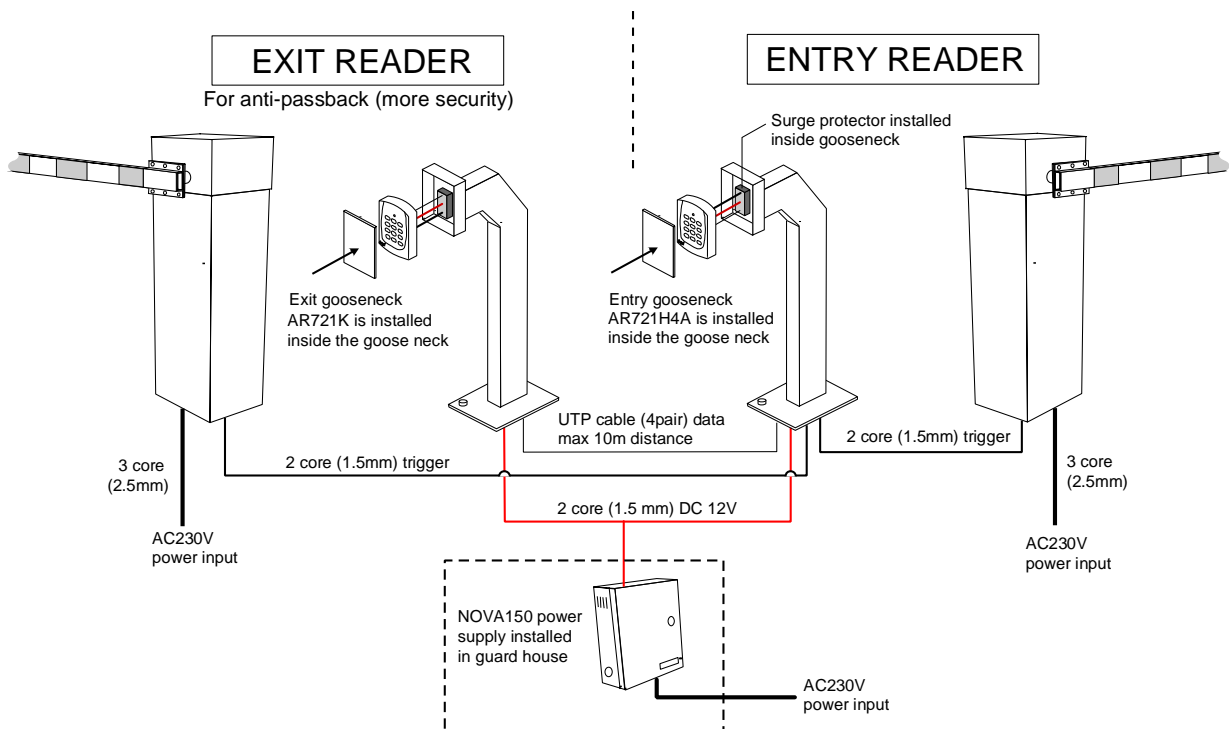

** It is suggested to add Varistor 17V at the beginning and ending of all wiring to protect equipment from being damaged by electrical surge.

© COPYRIGHT 24 Aug 2005. This documentation served as a reference only. It is subject to change without further notice. All the diagrams and information in this documentation may not be duplicated or modified in any form without the written approval from the management.